

Remote

- The back top two slider switches must be at the INSIDE position
- Turn remote power on by moving the back bottom slider switch to the right (lock) position
- Connect K1 with remote, press **Home**

Testing

- Turn PREP mode **LT+Start (+)** Arms tighten up
- Turn DAMP mode **LT+Back (-)** Arms relax up

Start

- Stand up **LT+Up**
- Walk mode **RT+A**

Booster Agent **LT+RT+A**

- Shake hand **A**
- Wave one hand **B**
- Thank you **Y**
- Wave hand **RB+X, Y, A**

(in Booster Agent, all dances can be stopped part way and walk around)

- Rock dance **LB+Left**
- Future dance **LB+Right**
- CNY dance **LB+Up**

Dance Agent **LT+RT+Y**

(in Dance Agent, all dances cannot be stopped part way and cannot walk around)

- Mounts & Pals **LB+RB+A**
- MJ dance **LB+Y**
- Reform Breeze **LB+ RB+B**
- Boxing kicks **LB+Left**
- Roundhouse kick **LB+Right**

Soccer Agent **LT+RT+B**

- Track ball **LT+A**
- Chase ball **LT+B**
- Kick ball **LT+X**
- Power kick **LT+Y**

Agent	Actions/Functions	Buttons	Prerequisites
Booster LT + RT + A	Shake Hand	A	Under WALK mode
	Wave	B	Under WALK mode
	Ultraman	X	Under WALK mode
	Respect	Y	Under WALK mode
	Lucky Cat	RB + A	Under WALK mode
	Dabbing	RB + B	Under WALK mode
	Cheer	RB + X	Under WALK mode
	Carry	RB + Y	Under WALK mode
	CNY Dance	LB + UP	Under WALK mode
	Rock Dance	LB + LEFT	Under WALK mode
	Future Dance	LB + RIGHT	Under WALK mode
	Get Up	LT + UP	Under DAMP/PREP mode

Dance LT + RT + Y	Rock Dance	LB+A	Under WALK mode
	CNY Dance	LB+B	Under WALK mode
	Future Dance	LB+X	Under WALK mode
	MJ Dance	LB+Y	Under WALK mode
	Arabic Dance	LB+DOWN	Under WALK mode
	Boxing Style Kick	LB+LEFT	Under WALK mode
	Roundhouse Kick	LB+RIGHT	Under WALK mode
	Mounts & Pals	LB+RB+A	Under WALK mode
	Reform Breeze	LB+RB+B	Under WALK mode

Soccer LT + RT + B	Shake Hand	A	Under WALK mode
	Wave	B	Under WALK mode
	Get Up	LT + UP	Under DAMP/PREP mode
	Track Ball	LT+A	Under WALK mode
	Chase Ball	LT+B	Under WALK mode
	Kick Ball	LT+X	Under WALK mode
	Power Kick	LT+Y	Under WALK mode